




PowerMaster™

5350/90S-PM

5350/90SQ-PM

STRIP NAILERS

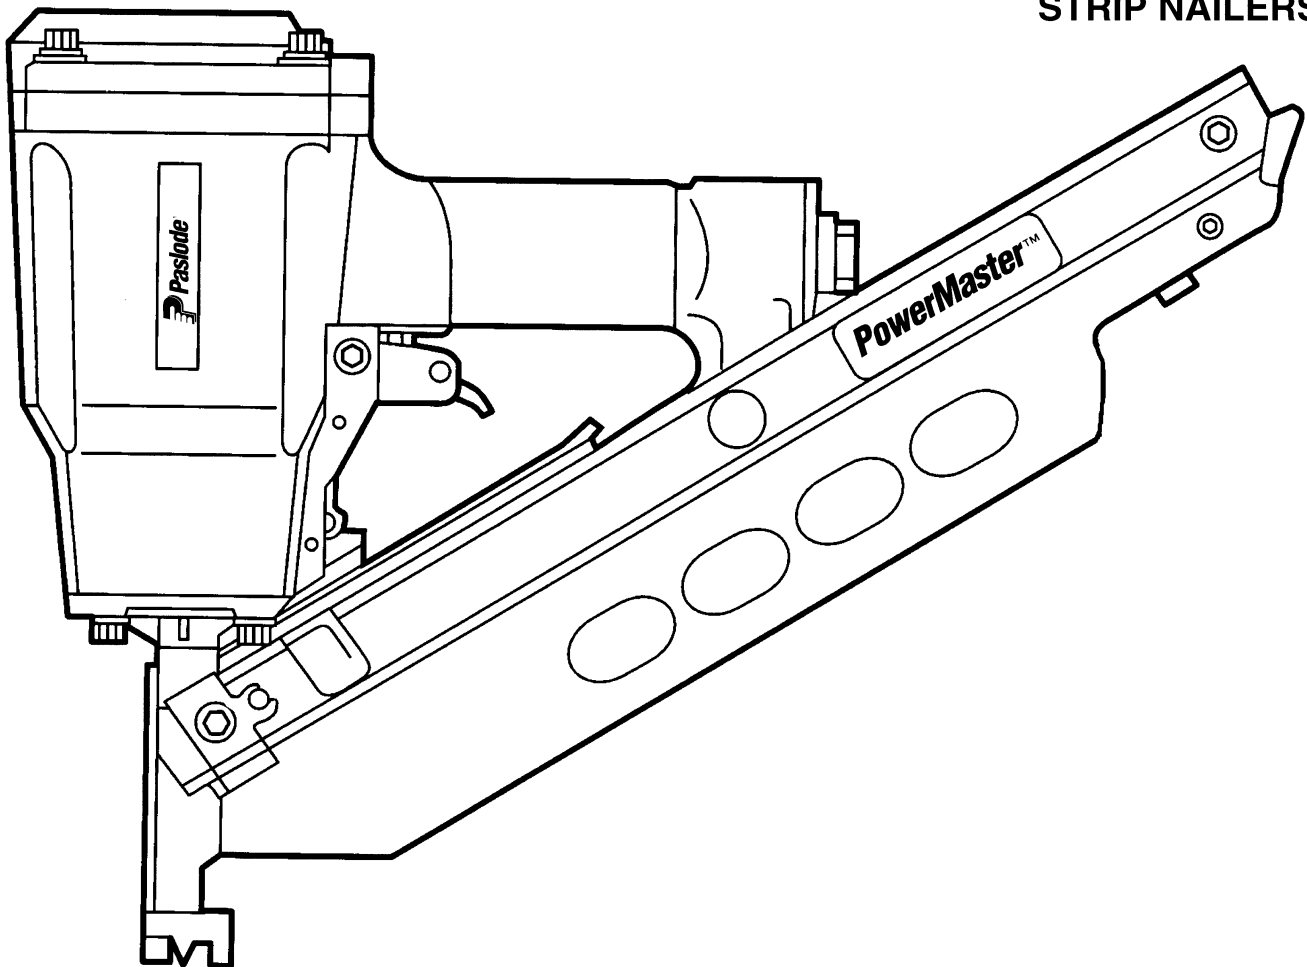

**IMPORTANT!
DO NOT DESTROY**

Always refer to safety and maintenance manual #403606 for detailed information on this tool. It is the customer's responsibility to have all operators and service personnel read and understand this information.

PowerMaster™

TOOL SCHEMATIC AND PARTS

PARTS LEGEND MODEL 5350/90S-PM Part No. 404910

5350/90SQ-PM Part No. 500510 (Europe)


| | | | | | |
|-------------|---|--|-------------|---|--------------------------------------|
| 1 013625 | 4 | Socket Head Capscrew #8-32 x 1/2" | 42 401992 | 1 | Spring, Intermediate W.C.E. |
| 2 406026 | 4 | Cupwasher, Diffuser | 43 401991 | 1 | Intermediate Work Contacting Element |
| 3 402057 | 1 | Air Deflector | 44 096893 | 1 | Name Plate |
| 402448 | 1 | Air Diffuser (5350/90SQ)) | 405553 | 1 | Name Plate (5350/90SQ) |
| 4 092735 | 4 | Socket Hd Capscrew, 1/4-20 x 1-1/4 | 45 402079 | 1 | Trigger Pin |
| 091873 | 4 | Socket Hd Capscrew 1/4-20 x 2" (5350/90SQ) | 46 404325 | 1 | Stop Nut |
| 5 002187 | 4 | Lock Washer, 1/4" | 47 005849 | 1 | Roll Pin, 1/8" Dia. x 11/16"Lg. |
| 6 092757 | 4 | Flat Washer | 48 405144 | 1 | Trigger |
| 091447 | 4 | Flat Washer (5350/90SQ) | 49 405147 | 1 | Lever, Trigger |
| 7 500452 | 1 | Cap | 50 500484 | 2 | Logo, Magazine |
| *8 401983 | 1 | Gasket | 51 401940 | 1 | End Plug |
| 9 500407 | 1 | Spring | 52 091622 | 1 | Reducing Pipe Bushing |
| 10 406041 | 1 | Retaining Ring | 53 091591 | 1 | O-Ring, End Plug |
| *11 500461 | 1 | O-Ring, Upper Valve Piston | *54 402008 | 1 | Gasket, Nose Flange |
| 12 500455 | 1 | Upper Valve Piston | 55 404885 | 1 | Nose |
| 13 401946 | 1 | Seal, Main Valve | 56 095417 | 4 | Lock Washer, 5/16 |
| *14 092042 | 1 | O-Ring, Lower Valve Piston | 57 009016 | 4 | Socket Hd Capscrew, 5/16 - 18 x 1" |
| *15 091208 | 1 | O-Ring, Lower Valve Piston | 58 404663 | 1 | Spring, Work Contacting Element |
| *16 401950 | 1 | O-Ring, Lower Valve Piston | 59 404886 | 1 | Work Contacting Element, Lower |
| 17 500456 | 1 | Lower Valve Piston | 60 500593 | 1 | Magazine |
| 18 500454 | 1 | Post | 63 404932 | 1 | Cover, Work Contacting Element |
| 19 095432 | 1 | O-Ring, Post | ▲ 64 404904 | 2 | Socket Head Capscrew, 1/4 - 28 x 5/8 |
| ▲ 20 402906 | 1 | Button HD Capscrew #10-32 x 5/8" | 65 500513 | 1 | Negator Spring Assembly |
| 21 091861 | 1 | Nut | 66 501046 | 1 | Drum Pin Assembly |
| 22 092116 | 1 | Washer | 68 500531 | 1 | Follower |
| *23 092971 | 1 | O-Ring, Piston | 69 500516 | 1 | FH Socket Head Screw, 5/16-24 x 7/8 |
| 24 401956 | 1 | Piston | 70 500524 | 1 | Washer |
| *25 401904 | 1 | Driver Blade | 71 500525 | 1 | Gripco Nut 5/16 - 24 |
| 26 402011 | 1 | Seal, Sleeve | 72 500517 | 1 | Socket Head Capscrew 10-32 x 2" |
| 27 401900 | 1 | Sleeve | 73 500511 | 1 | Magazine End Cap |
| *28 092762 | 1 | O-Ring, Sleeve | 74 091732 | 1 | Lock Nut, 10-32 |
| 29 091024 | 1 | O-Ring, Sleeve | 75 500518 | 1 | Socket Head Capscrew, 6-32 x 5/8" |
| 30 401984 | 1 | Flange | 76 500520 | 2 | Wear Strip |
| 31 402993 | 1 | Shim | 77 091569 | 1 | Flex-Loc Nut, 6-32 |
| *32 401985 | 1 | O-Ring, Flange | 78 401434 | 1 | Spring, Latch |
| *33 404768 | 1 | Bumper | 79 404908 | 1 | Bushing, Latch |
| 34 401936 | 1 | Housing | 80 500515 | 1 | Follower Latch |
| 35 500488 | 1 | Grip, Handle | **81 500458 | 1 | Warning Label (5350/90S) |
| 36 404937 | 2 | Logo, Housing | 82 500509 | 1 | Front Bracket |
| 37 097748 | 1 | Spring, Valve Pin | 83 500521 | 1 | Nail Cover |
| 38 097746 | 1 | Valve Pin | 84 500453 | 1 | Bumper, Post |
| *39 092174 | 1 | O-Ring, Valve Body | 85 500571 | 1 | Fastener Range Label (5350/90SQ) |
| 40 401958 | 1 | Valve Body | 86 402447 | 4 | Spacer, Diffuser (5350/90SQ) |
| 41 026133 | 3 | Roll Pin, 1/8" Dia x 1"Lg | | | |

▲ Apply Loctite 242 (Blue) Part No. 093500



* Denotes normal wear items

** NOTE: Make sure warning label (500458) is properly affixed. Replace if necessary. The label is available at no charge through the service department.





→ Denotes Change

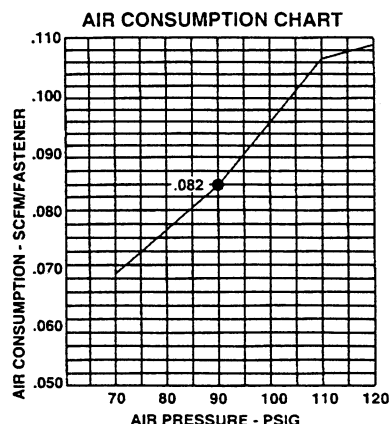


"Q" Parts

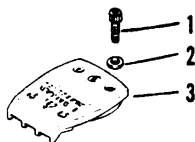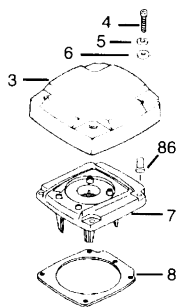




Cap Assembly #500466

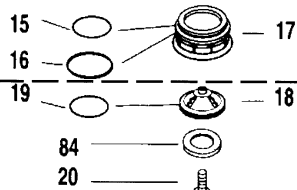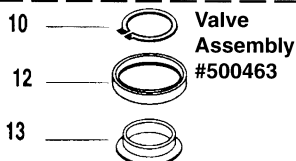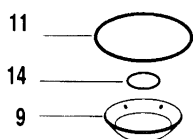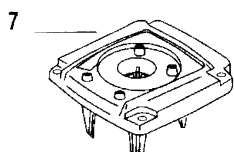





Piston Assembly #401933

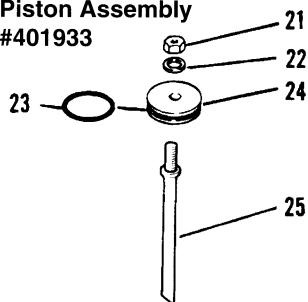

5350/90S-PM
404910
5350/90SQ-PM
500510 (Europe)

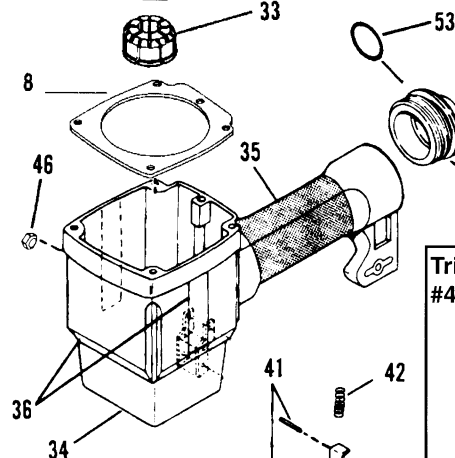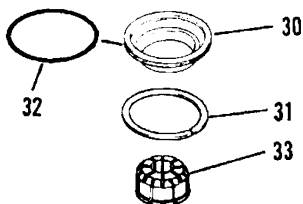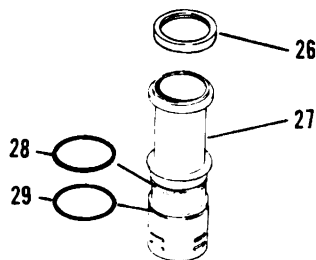

Trigger Assembly #402408

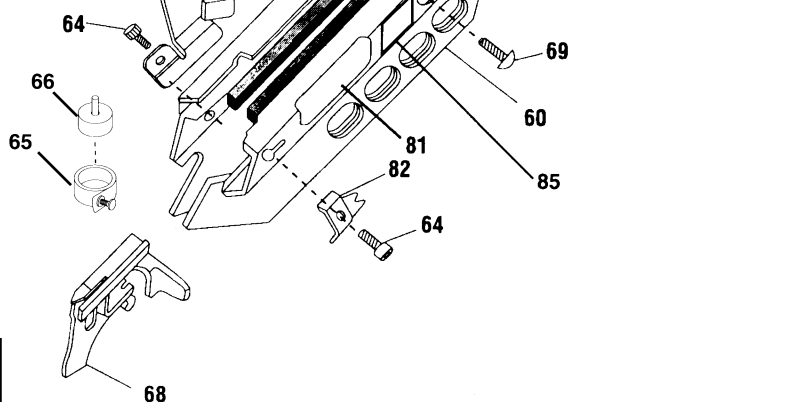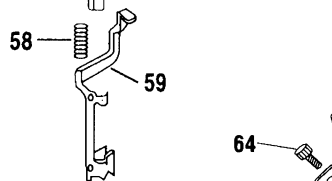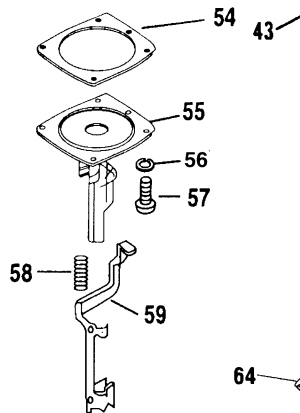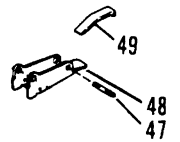


WARNING

All Parts must be periodically inspected and replaced if worn or broken. Failure to do this can affect the tool's operation and present a safety hazard.

ACCESSORIES

Sequential Operating Kit


This special attachment is designed for sequential operation (stops contact firing). The operator must depress and hold the work contacting element against the work surface before pulling the trigger. This sequence must be repeated each time the tool drives a fastener.

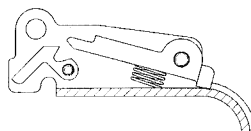

Part No. 406006

Remote Fire Valve

 This valve via a positive air signal allows a machine mounted tool to be operated from an automatic air valve or foot pedal system.



Part No. 1X0713

Adjustable Flush Drive Work Contacting Element

 
This Work Contacting Element has multiple settings to control depth of drive and will not mar the work surface.



Part No. 405244

No Mar Tip

For decking and siding applications where the normal work contacting element will mar the surface.




Part No. 405074

Lubricants and Loctite

| | |
|---------------------------------|-----------------|
| Loctite 242 (Blue) | Part No. 093500 |
| Lubricating Oil 8 oz. | Part No. 219026 |
| Lubricating Oil with Antifreeze | Part No. 219090 |
| Chemplex 710 Lubricant 1 lb. | Part No. 403734 |

Silencer Kit

 This kit is used to minimize the sound of the air rushing out of the air deflector during tool operation.



Part No. 402451

Degreaser Cleaner

Ideal cleaner for all Paslode® tools. Part No. 219086

Belt Hook

Part No. 219017

Safety Glasses

| | |
|--------|-----------------|
| Clear | Part No. 402510 |
| Tinted | Part No. 402512 |

Trigger Valve Repair Kit

This kit repairs all trigger valve air leaks.

Part No. 219224

Rafter Hanger Bracket



Part No. 219176

5000 Series Tool Repair Kit

This kit repairs all air leaks except for the trigger valve.


Part No. 219219

SAFETY INSTRUCTIONS

WEAR EYE AND HEARING PROTECTION




Always wear hearing protection and eye protection devices, including side shields when operating or working in the vicinity of a tool.

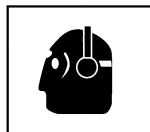

Never use any bottled air or gases such as oxygen to operate the tool since they could cause the tool to explode.

DO NOT EXCEED MAXIMUM RECOMMENDED AIR PRESSURE

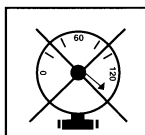

Operate the tool using only the recommended air pressure. Do not exceed the maximum air pressure marked on the tool. Be sure the air pressure gauge is operating properly and check it at least twice a day.

