


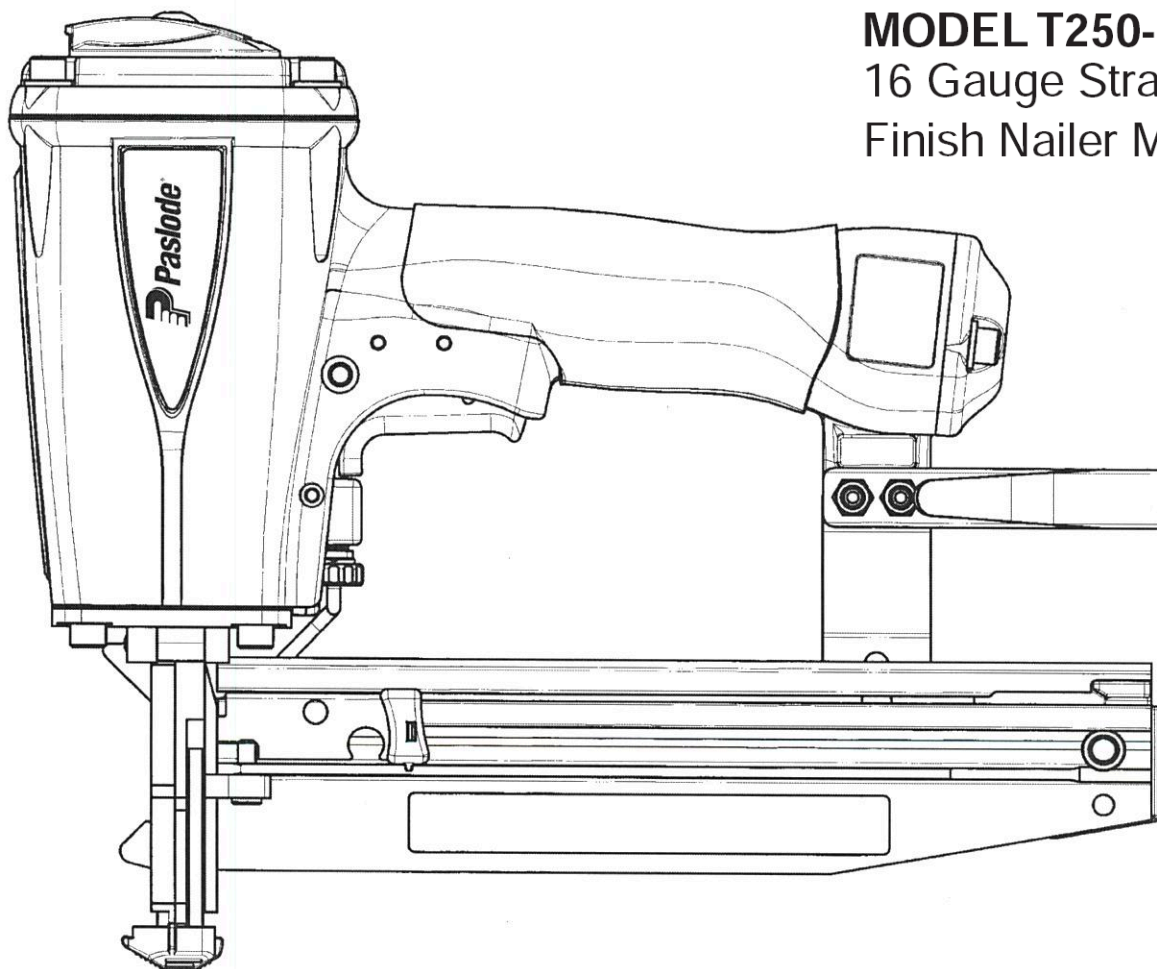


MODEL T250-F16
16 Gauge Straight
Finish Nailer MK2

IMPORTANT!

DO NOT DESTROY

It is the customer's responsibility to have all operators and service personnel read and understand this manual.

**OPERATING MANUAL AND
SCHEMATIC**

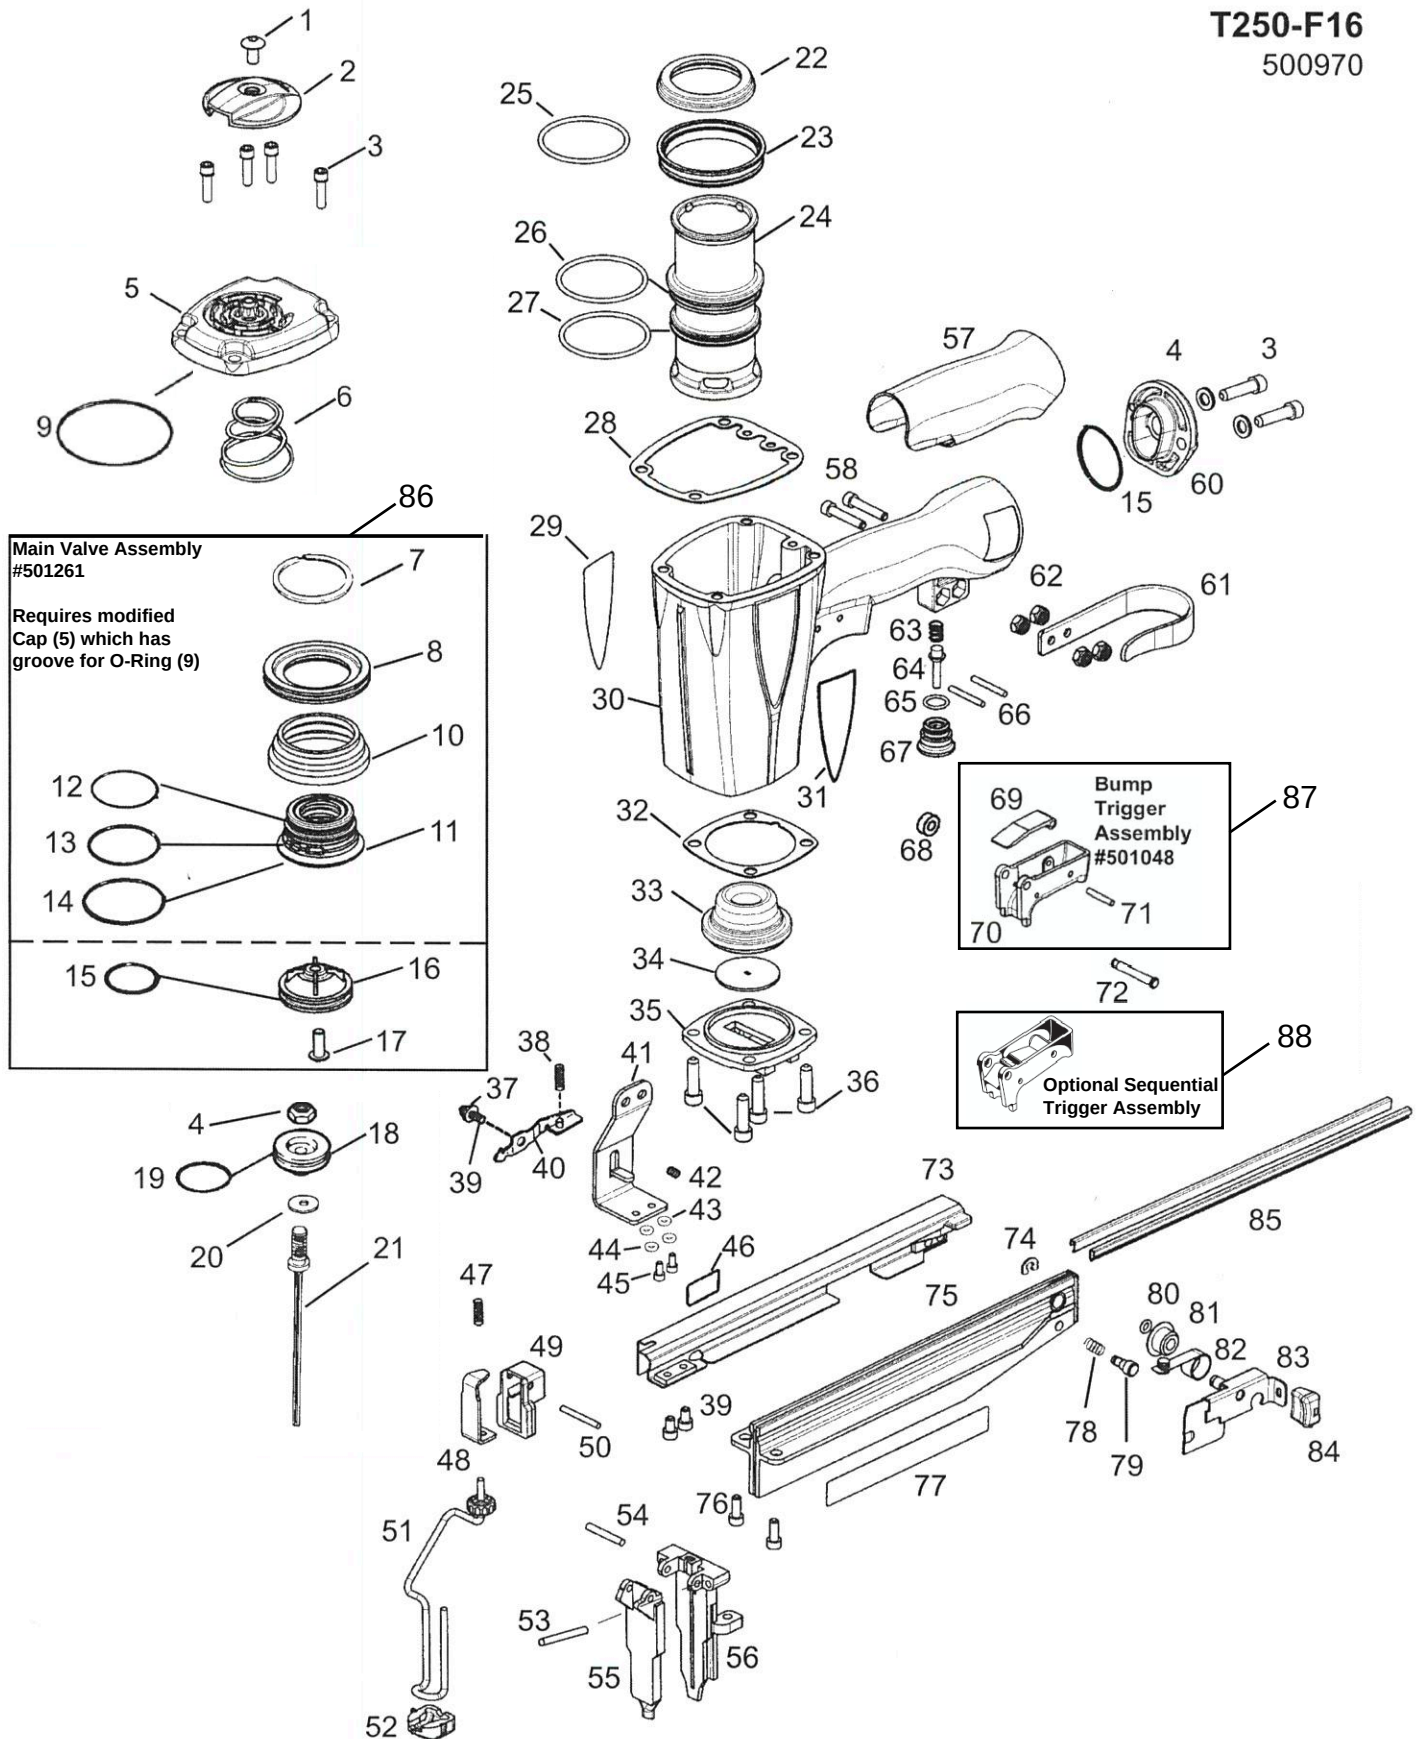

PARTS LEGEND

PASLODE T250-F16 MK2

500970/B20115 MK2

1	501043	1	Screw THSC 1/4-20 X 1/2	**	46	500458	1	Label, Warning	
2	500956	1	Cap Diffuser	*	47	500772	1	Spring, WCE	
3	501299	6	Screw SHC 1/4-20 X 1 (RPLS 091592)		48	501143	1	WCE, Intermediate	
4	403582	1	Nut, Locking 24-5/16		49	500766	1	Guide Block	
→	5	501254	1	Cap (RPLS 500958) (Main Valve Assy 501261 RQD)		50	071297	1	Pin, Roll 1/8 X 1-1/8
6	402717	1	Spring, Conical		51	500840	1	WCE Assy (RPLS 403707)	
7	404230	1	Ring, Retaining	→*	52	404180	1	No-Mar Tip, Deep Drive (Orange)	
8	404122	1	Piston, Upper Valve (PA 501261)		53	404698	2	Pin, Roll Assy	
* 9	091537	1	O-Ring		54	402730	1	Pin	
10	404054	1	Seal, Main Valve (PA 501261)		55	403592	1	Front Guide	
11	404056	1	Piston, Valve Lower (PA 501261)		56	403591	1	Back Plate	
* 12	090927	1	O-Ring		57	501023	1	Grip, Handle	
* 13	092775	1	O-Ring		58	080326	2	Screw SHC 10-32 X 1	
* 14	092773	1	O-Ring		59			Deleted	
* 15	404256	2	O-Ring		60	500963	1	End Plug	
16	500954	1	Post, Main Valve		61	500955	1	Belt Hook	
17	015660	1	Screw BHC 10-24 X 1/2		62	092037	4	Nut, Locking 10-32	
→	18	501169	1	Piston		63	097748	1	Spring
* 19	405430	1	O-Ring, Piston		64	097746	1	Pin, Valve	
→	20	404274	1	Washer, Flat	*	65	092174	1	O-Ring
→*	21	403594	1	Driver Blade		66	026133	2	Pin, Roll 1/8 X 1
* 22	402725	1	Seal, Sleeve		67	401958	1	Body, Valve	
23	405243	1	Flange, Sleeve		68	402668	1	Washer, Retaining	
24	500952	1	Sleeve		69	501008	1	Lever, Trigger (PA 501048)	
* 25	402728	1	O-Ring		70	501010	1	Trigger, Bump (PA 501048)	
* 26	091966	1	O-Ring		71	501009	1	Pin, Roll	
* 27	500369	1	O-Ring, Sleeve		72	402669	1	Pin, Trigger	
28	500975	1	Gasket, Cap		73	500972	1	Rail Cover Assy	
29	501140	1	Label, Logo Housing LH		74	403713	1	E-Ring, Retaining	
30	500957	1	Housing		75	500968	1	Rail Assy	
31	501141	1	Label, Logo Housing RH		76	009397	2	Screw SHC 10-24 X 1/2	
32	402708	1	Gasket, Nose		77	501142	1	Name Plate	
33	500950	1	Bumper		78	091536	1	Spring	
→*	34	403705	1	Seal, Driver Blade		79	403711	1	Latch Pin, Follower
35	402706	1	Flange, Nose	*	80	094295	1	O-Ring	
36	091545	4	Screw SHC 1/4-20 X 7/8		81	403710	1	Roller	
37	402629	1	Washer, Hardened #10		82	403708	1	Negator	
38	405076	1	Spring, Front Guide Latch		83	403715	1	Follower Assy	
39	403716	3	Screw SHC 10-32 X 5/16		84	501139	1	Follower Tab	
40	403712	1	Latch Assy, Front Guide	*	85	500973	2	Wear Strip	
41	501133	1	Bracket Assy, Rail	→	86	501261	1	Main Valve Assy (CAP 501254 RQD)	
42	401988	1	Spring					(RPLS 404188, 404122, 404054, 404056)	
43	403812	2	Washer		87	501048	1	Trigger Assy, Bump (Orange) (RPLS 501010)	
44	004238	2	Washer, Locking #10		88	501039	-	Trigger Assy, Sequential (Grey) (Optional)	
45	004224	2	Screw SHC 10-32 X 3/8	→	AR	010018	-	Service Kit (AU Only)	

- * Normal Wear Items
- ** Ensure Warning Label is affixed and legible
- New Change
- PA Purchase Assembly (individual part not for sale)
- AR As Required
- RQD Required - Use with corresponding modified part(s)

Nominal air consumption at 100 PSI = 0.04 SCFM/Fastener



SAFETY INSTRUCTIONS



WEAR EYE AND HEARING PROTECTION

Always wear approved eye and hearing protection when operating tool. Ensure others in the near vicinity use the same protective equipment.
Use eye protection when cleaning tool.



USE SPECIFIED AIR PRESSURES ONLY

Operate the tool at specified air pressures only. Never exceed maximum. Check regulated air pressure gauge operation at least twice a day.



USE COMPRESSOR AIR SUPPLY ONLY

Never use any bottled air or gases such as oxygen to operate the tool. Such action may cause catastrophic failure, causing serious injuries.



WARNING: All parts must be periodically inspected and replaced if worn or damaged.
Failure to comply can affect the tool's operation and present a safety hazard.