



No.	Code	Name	No.	Code	Name
01	501686	SCREW CAP	36	071297	Roll Pin
02	501760	DEFLECTOR CAP SILENCER	37	097748	Spring, Valve Pin
03	501300	SCREW+WASHER	38	097746	Valve Pin
04	500680	CAP	39	092174	O-Ring, Valve Body
05	501001	GASKET,CAP	40	401958	Valve Body
06	500754	SPACER,EXHAUST	41	402668	Retaining Ring
07	500744	STOP,PISTON	42	402669	Pin, Trigger
08	500743	SPRING,VALVE	43	501039	Sequential Trigger Assembly
09	500742	SUPPORT,VALVE SPRING		501048	Contact Trigger Assembly
10	091986	O-RING	44	095417	Lockwasher
11	501989	VALVE ASSEMBLY	45	009016	SCREEW
12	502089	O-RING	49	500531	Follower
13	501861	O-RING	50	501046	Drum Pin Assembly
14	092971	O-Ring, Piston	51	500513	Negator Assembly
15	502906	PISTON ASSEMBLY	52	500525	Locknut
16	502896	SLEEVE	53	404274	Flat Washer
17	500249	O-RING	54	500717	Nail Cover
18	092235	O-Ring, Midcheck	55	500520	Wear Strip
19	500779	Flange, Sleeve	56	404325	Stop Nut
20	501002	O-Ring	57	501607	End Cap, Magazine-RT
21	500866	Bumper	58	501028	Spring, Latch
22	500729	Blade Seal	59	500848	Latch
23	501286	Housing	60	501044	Hex Key, Long Arm
24	501333	Label, Housing-Leftside	61	501606	End Cap, Magazine-LF
	501334	Label, Housing-Rightside	62	501026	SCREEW
25	092042	O-Ring, End Cap	63	401955	Flatwasher
26	501219	End Cap, Housing	64	066840	SCREEW
27	501299	SCREW+WASHER	65	502899	Warning Label
28	091622	Reducing Pipe Bushing	66	502898	Model Label
29	501006	Spring, W.C.E.	67	500516	SCREEW
30	501363	Upper W.C.E.	68	502897	Magazine with Wear Strips
31	091618	SCREW	69	404904	SCREEW
32	002187	Lock Washer	70	500509	Front Bracket
33	404800	Flat Washer	71	502254	AIR NIPPLE
34	500713	Lower W.C.E.			
35	500712	Nose 30°			