




**NO ANZ SPARE PARTS SUPPORT
FOR REFERENCE ONLY**

**Positive Placement[®]
Metal Connector Nailer
MODEL PF150S-PP MK2**

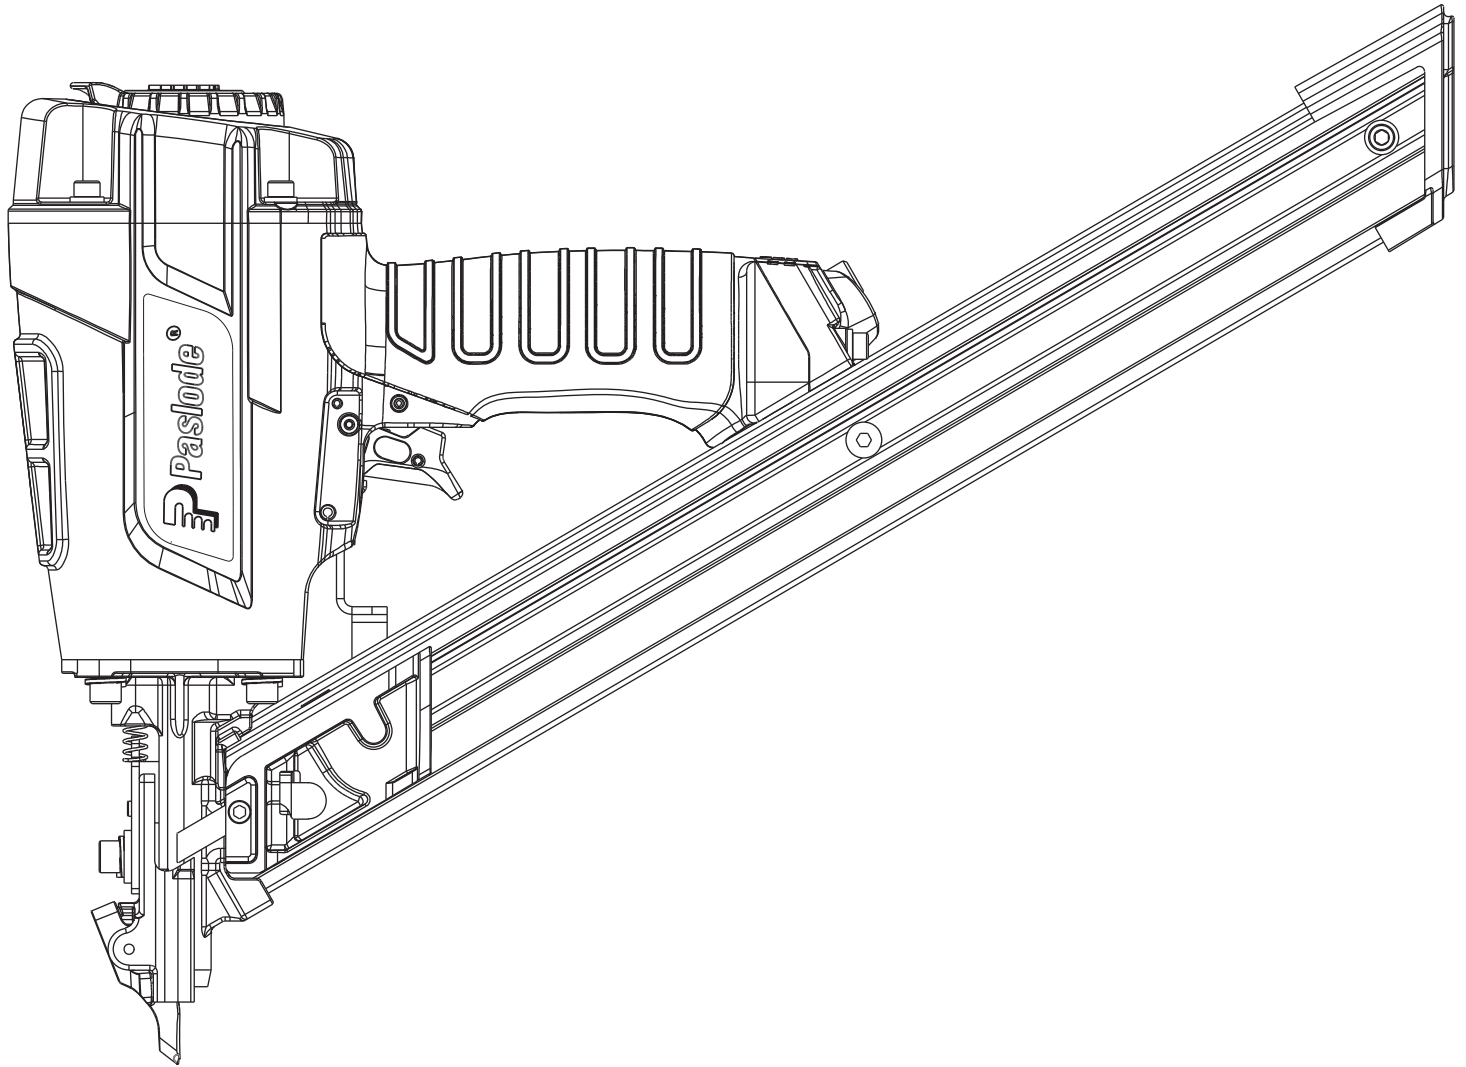


IMPORTANT!

DO NOT DESTROY

It is the customer's responsibility to have all operators and service personnel read and understand this manual.

**OPERATING MANUAL AND
SCHEMATIC**

**Positive Placement®
Metal Connector Nailer
PF150S-PP
502300**

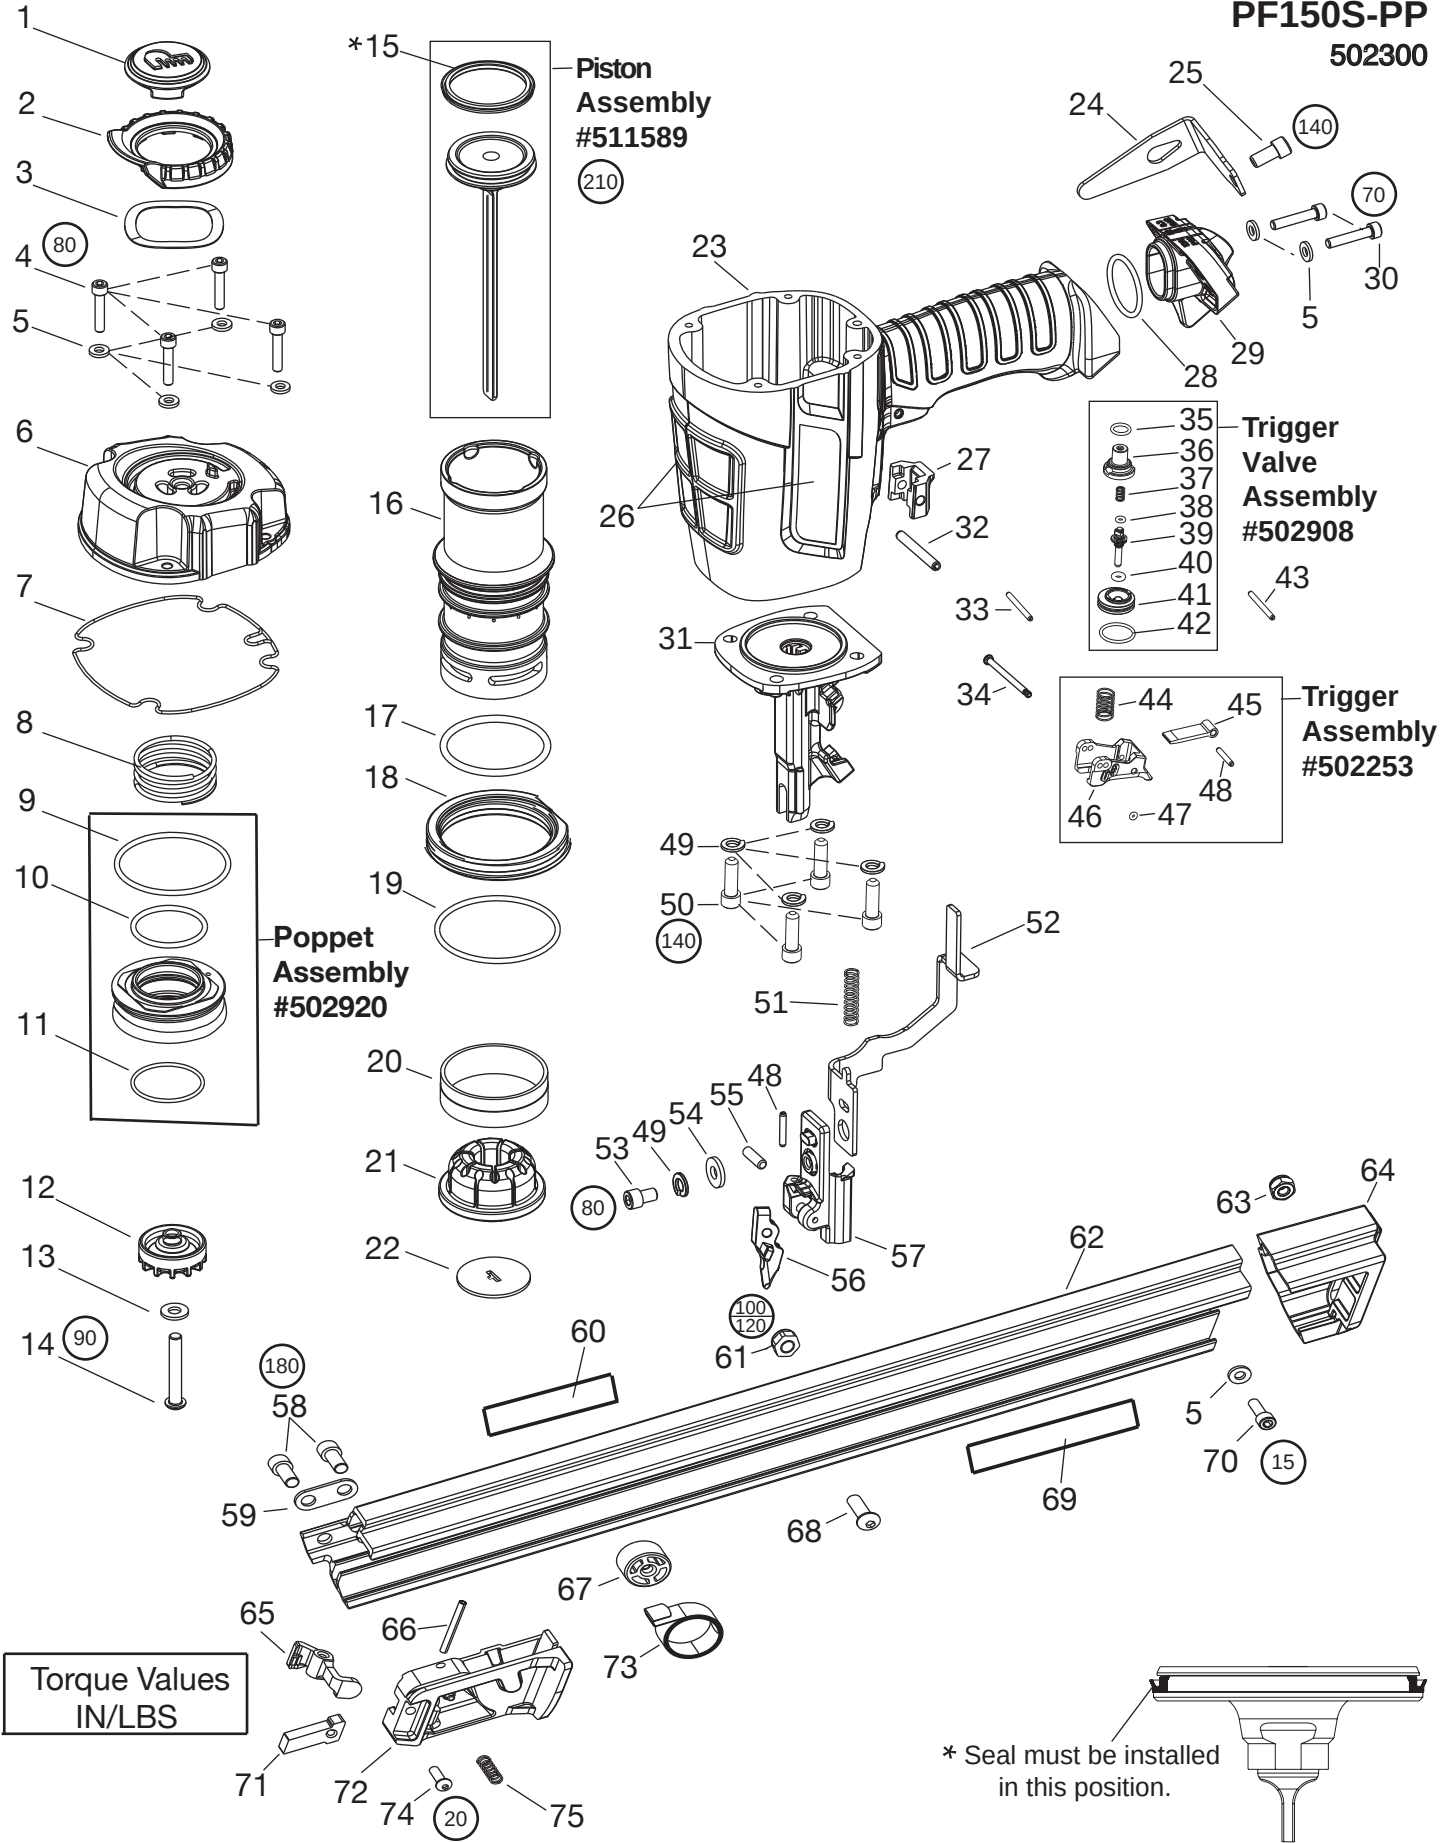

NO ANZ SPARE PARTS SUPPORT - FOR REFERENCE ONLY

Positive Placement®

PARTS LEGEND

Metal Connector Nailer


PF150S-PP 502300

1	502330	1	Main Valve Nut	39	502045	1	Valve Pin
2	502304	1	Air Deflector	*40	196345	1	O-Ring
3	502343	1	Wave Washer	41	502043	1	Lower Valve Spool
▲ 4	502339	4	S.H.C.S. #10-24 x 7/8"	*42	092747	1	O-Ring
5	408302	7	Flat Washer	43	403796	1	Roll Pin 1/8"x 1-1/4"
6	502303	1	Cap	44	502060	1	Spring, Trigger
7	502313	1	Gasket, Cap	45	502225	1	Trip Lever
8	360594	1	Spring,	46	502224	1	Trigger, Sequential
* 9	202382	1	O-Ring	*47	502042	1	O-Ring
*10	201806	1	O-Ring	48	091866	2	Roll Pin 1/8" x 3/4"
*11	539676	1	O-Ring	49	002187	5	Lock Washer
*12	502056	1	Exhaust Seal Assembly	▲50	091545	4	S.H.C.S. 1/4-20 x 7/8"
13	1011802	1	Washer	*51	502328	1	Spring, W.C.E.
▲14	502327	1	B.H.C.S. 1/4-20 x 1-1/2"	52	502321	1	W.C.E. Upper
*15	502311	1	Piston Seal	▲53	502337	1	S.H.C.S. 1/4-20 x 3/8"
16	502309	1	Sleeve, Cylinder	54	404800	1	Flat Washer
17	092971	1	O-Ring, Flange	55	502325	1	Probe Pin
*18	502307	1	Flange	*56	511059	1	Probe
*19	192799	1	O-Ring, Flange	57	502320	1	W.C.E., Lower
*20	502310	1	Check Band	▲58	502338	2	S.H.C.S. 1/4-28 x 1/2"
*21	502317	1	Bumper	59	502323	1	Magazine Washer
→ 22	511587	1	Blade Seal	**60	502917	1	Label
23	502302	1	Housing W/Overmolded grip	61	442681	1	Lock Nut
24	502332	1	Rafter Hook	62	502316	1	Magazine Assembly
25	502345	1	S.H.C.S. 5/16-18 x 5/8"	63	092037	1	Lock Nut
*26	502034	1	Label, Housing RIGHT	64	502329	1	End Cap, Magazine
	502035	1	Label, Housing-Left	65	511183	1	Follower Claw
27	502033	1	W.C.E. Guide Block	66	502340	1	Spiral Pin
*28	402963	1	O-Ring, Housing End Plug	67	502025	1	Drum Pin Assembly
29	502305	1	End Plug, Housing	▲68	502017	1	B.H.C.S 1/4-20 x 3/4"
▲30	502336	2	S.H.C.S. #10-24 x 1"	69	502928	1	Logo Label
31	502306	1	Nose	▲70	502347	1	S.H.C.S. 10-32 x 5/8"
32	380931	1	Roll Pin 3/16 x 1-1/2"	71	502335	1	Lockout Bar
33	502333	1	Roll Pin, Trigger 1/8 x 1-1/2"	72	502318	1	Follower Body
34	502324	1	Pin, Trigger	73	502226	1	Negator Spring
*35	197913	1	O-Ring	▲74	500627	1	B.H.C.S. 8-32 x 1/2"
36	502044	1	Upper Valve Spool	75	502020	1	Spring, Follower Body
*37	502059	1	Spring, Valve Pin				
*38	1015358	1	O-Ring				

- * Denotes Normal Wear Items
- ** Make sure Warning Label (Part No.502917) is properly affixed. Replace if necessary. Label available at no charge through the Service Department.
- ▲ Apply Loctite® 242 (Blue) Part No. 093500
- Apply Loctite® 620 (Green) Part No. 401491
- Denotes New Change

⚠ WARNING

All parts must be periodically inspected and replaced if worn or broken. Failure to do this can affect the tool's operation and present a safety hazard.

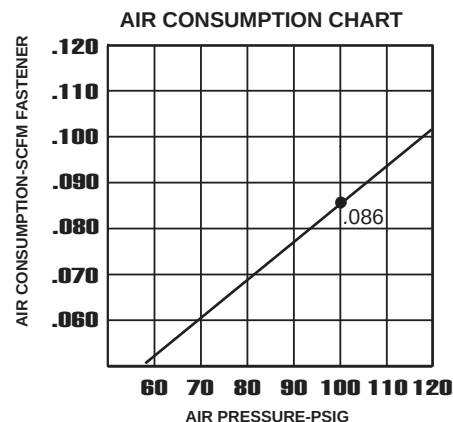

ACCESSORIES

Lubricants and Loctite®

Loctite® 242 (Blue)

Lubricating Oil 16 oz.

Lubricating Oil with Antifreeze 8 oz.

Chemplex® 710 Lubricant 1lb.

Lubricant 5 gram tube



Part No. 093500

Part No. 403720

Part No. 219090

Part No. 403734

Part No. 219188

Tool Cleaner

Ideal cleaner for all Paslode tools.



Part No. 219348

Safety Glasses

Clear



Part No. 401382

